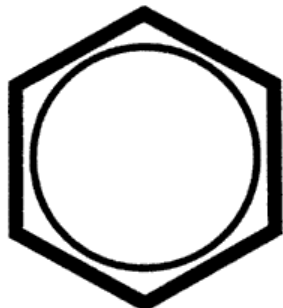
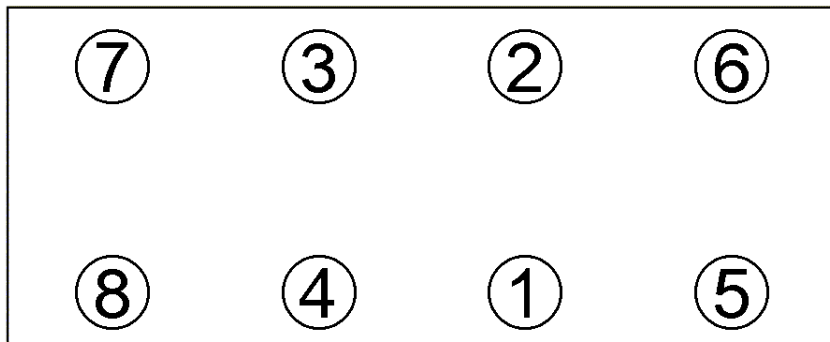


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****032.639**passend für / suitable for  
adaptable à / adaptable a**Peugeot/Renault/Volvo****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo167.540  
M12x1,5x178Anziehen/  
Tightening/  
Serrage/  
Apriete

ZM, ZM J, Z7V

- 60 Nm
- 20 Nm + 115°
- 12 min
- 360 min
- 20 Nm + 115°

B 27 A / E / F

- 10 Nm
- 30 Nm
- 60 Nm
- 15 min
- 20 Nm + 120°
- 15 min
- 30 min
- 20 Nm + 120°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 1,2 mm, Ø 90 mm, links/left/gauche/izquierda

Mot.: ZM, ZMJ, Z7V 708/709/711, B27A/E/F

2,7 ltr. V6

504, 604, R25, R30, 240, 260

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/09/05

**\*032.639\***