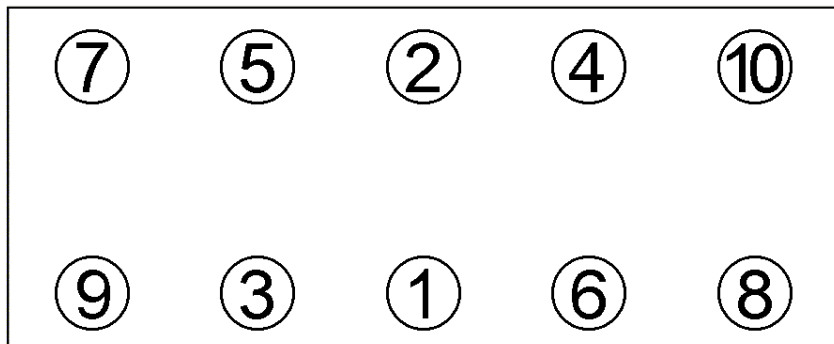


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****764.133**passend für / suitable for  
adaptable à / adaptable a**Mitsubishi / Hyundai****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

709.170

M 10x1,25x100

Anziehen/  
Tightening/  
Serrage/  
Apriete
 30 - 35 Nm  
 50 - 55 Nm  
 70 - 75 Nm
**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

72,5 mm Ø

Colt A151, A155	Mot.4G11, 4G16	1977>9/1986
Colt C15A	Mot.4G11, 4G16	1977>9/1986
Lancer A171, C11A	Mot.4G11, 4G16	1977>9/1986
Mirage	Mot.4G11, 4G16	1977>9/1986
Colt C11, C51	Mot.4G13	8/1986>11/1989

**Elring-Serviceteam**Fon +49 7123 724 799  
Fax +49 7123 724 798  
[service@elring.de](mailto:service@elring.de)

24/11/12

**\*764.133\***